

# SIUS Electronic scoring systems

## Installation of Time Control Unit TCU25 (STYX network)

### Configuration (must be done for all new TCU25 or in case of exchange)

#### 1 Setting the selector

The device is designed to control a max. of 10 targets (5 on the left, 5 on the right).



The device must be disconnected.



Set selector  
(e.g. 1 = targets 1–5)


Set selector  
(e.g. 2 = targets 6–10)

Selector	Group (targets)
1	1 (1–5)
2	2 (6–10)
3	3 (11–15)
4	4 (16–20)
5	5 (21–25)
6	6 (26–30)
7	7 (31–35)
8	8 (36–40)
9	9 (41–45)
A	10 (46–50)
B	11 (51–55)
C	12 (56–60)
D	13 (61–65)
E	14 (66–70)
F	15 (71–75)

#### 2 Save settings



Connect the device.

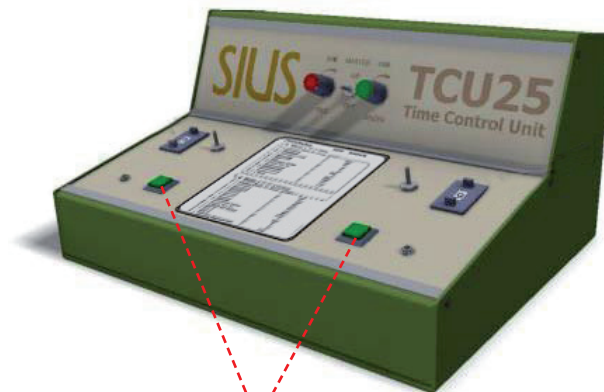

Press and hold  
(for at least 10 seconds)

10 seconds after startup or after a new configuration, the start button flashes as many times as the number of the actual chosen selector.

Examples:

Selector 1 (targets 1–5)  
Button flashes 1x

Selector 2 (targets 6–10)  
Button flashes 2x

etc.

Immediately after connecting the device:  
Press and hold both green start buttons simultaneously for at least 10 seconds.

The device is now configured and ready to use.

## Operation

#### 1 Choose program


Set the number of the desired program («0+Start» switches between Menu 1<->2). Then press the start button.

PROGRAMS	RED	GREEN
<b>Menu 1 (1 Flash)</b>		
0 = «Select Menu 2»: Press «START»		
1 = Standard	7"	150"
2 = Standard	7"	20"
3 = Standard/CISM	7"	10"
4 = RFP/CISM	7"	8"
5 = RFP/CISM	7"	6"
6 = RFP	7"	4"
7 = Precision Pistol	7"	300"
8 = Rapid Fire 5x	7"	3"
9 = Malfunction	7"	240"
A = Malfunction	7"	180"
B = Malfunction	7"	120"
C = Malfunction	7"	60"
D = 1 Shot	3"	1.2"
<b>Menu 2 (2 Flashes)</b>		
0 = «Select Menu 1»: Press «START»		
1 = Standard	7"	150"
2 = Standard	7"	20"
3 = Standard	7"	10"
4 = Special	7"	30"
5 = Special	7"	40"
6 = Special	7"	50"
7 = Special	7"	60"
8 = Special	7"	90"
9 = Precision Pistol	7"	360"
A = Rapid Fire 5x	3"	3"
B = 5-Shot Air Pistol	0"	10"
C = RFP II	3"	8"
D = RFP II	3"	6"
E = RFP II	3"	4"
F = Sighting Malfunction	7"	120"


#### 2 Setting «Master-Slave»

The Master/Slave setting enables the control of 5 or 10 targets or even the central control of the whole installation.



**Independent control**  
Individual control of 5 targets

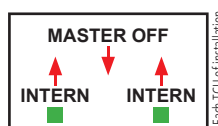

**Control in pairs**  
Control of 10 targets with the same device

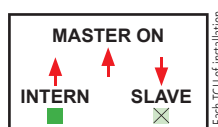

**Central control**  
Control of all targets (whole installation) with a single device

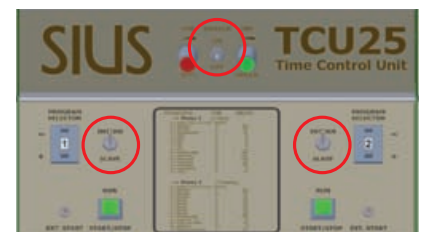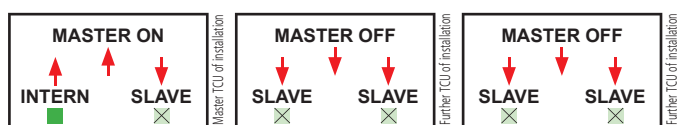

#### Legend:

- ↑ Switch upwards
- ↓ Switch downwards
- Start button active
- ⊗ Start button inactive

# SIUS Elektronische Trefferanzeigen

## Installation «Time Control Unit TCU25» (STYX Netzwerk)


**Konfiguration** (muss bei allen neuen TCU25 sowie bei einem Wechsel gemacht werden)

### 1 Den «Selector» einstellen

Das Gerät kann maximal 10 Scheiben ansteuern (5 auf der linken Seite, 5 auf der rechten Seite).



Das Gerät muss ausgesteckt sein.

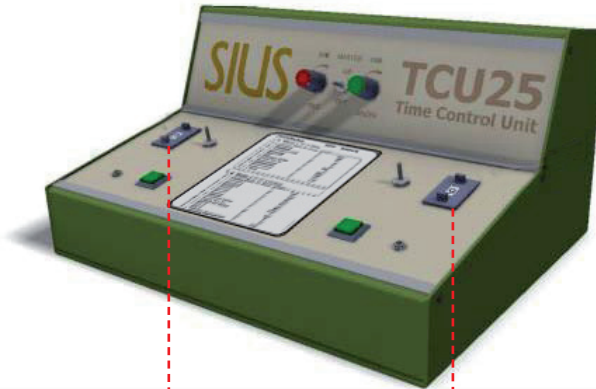

«Selector» einstellen  
(z.B. 1 = Scheiben 1–5)


«Selector» einstellen  
(z.B. 2 = Scheiben 6–10)

Selector	Gruppe (Scheibe)
1	1 (1–5)
2	2 (6–10)
3	3 (11–15)
4	4 (16–20)
5	5 (21–25)
6	6 (26–30)
7	7 (31–35)
8	8 (36–40)
9	9 (41–45)
A	10 (46–50)
B	11 (51–55)
C	12 (56–60)
D	13 (61–65)
E	14 (66–70)
F	15 (71–75)

### 2 Einstellungen sichern



Gerät einstecken.

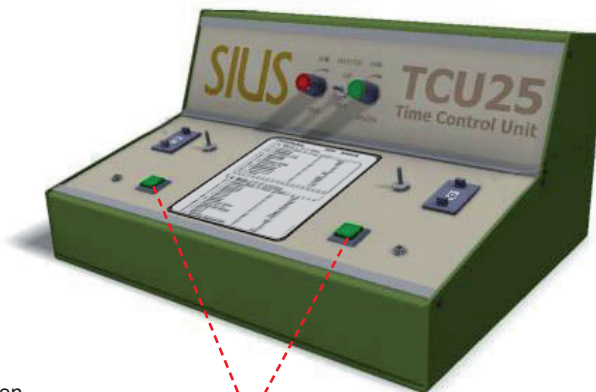

**Gedrückt halten**  
(für mindestens 10 Sekunden)

10 Sekunden nach dem Starten oder nach einer neuen Konfiguration leuchtet der Start-Knopf so viele Male auf wie der aktuell gewählte «Selector».

Beispiele:

Selector 1 (Scheibe 1–5)  
Knopf leuchtet 1x

Selector 2 (Scheibe 6–10)  
Knopf leuchtet 2x  
usw.

**Sofort nach dem einstecken des Gerätes:**

Beide grünen Start-Knöpfe gleichzeitig während mindestens 10 Sekunden nach unten gedrückt halten.

Das Gerät ist nun konfiguriert und einsatzbereit.

## Bedienung


### 1 Programm wählen

Nummer des Programms wählen («0+Start» wechselt zwischen Menu1<->2). Dann den Start-Knopf drücken.


PROGRAMS	RED	GREEN
<b>Menu 1 (1 Flash)</b>		
0 = «Select Menu 2»: Press «START»		
1 = Standard	7"	150"
2 = Standard	7"	20"
3 = Standard/CISM	7"	10"
4 = RFP/CISM	7"	8"
5 = RFP/CISM	7"	6"
6 = RFP	7"	4"
7 = Precision Pistol	7"	300"
8 = Rapid Fire 5x	7"	3"
9 = Malfunction	7"	240"
A = Malfunction	7"	180"
B = Malfunction	7"	120"
C = Malfunction	7"	60"
D = 1 Shot	3"	1.2"
<b>Menu 2 (2 Flashes)</b>		
0 = «Select Menu 1»: Press «START»		
1 = Standard	7"	150"
2 = Standard	7"	20"
3 = Standard	7"	10"
4 = Special	7"	30"
5 = Special	7"	40"
6 = Special	7"	50"
7 = Special	7"	60"
8 = Special	7"	90"
9 = Precision Pistol	7"	360"
A = Rapid Fire 5x	3"	3"
B = S-Shot Air Pistol	0"	10"
C = RFP II	3"	8"
D = RFP II	3"	6"
E = RFP II	3"	4"
F = Sighting Malfunction	7"	120"

### 2 Einstellung «Master-Slave»


Die Master/Slave-Einstellung ermöglicht die Steuerung von 5 oder 10 Scheiben oder sogar die zentrale Steuerung der gesamten Anlage.

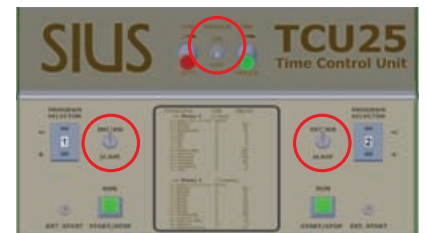


**Unabhängig**  
Individuelle Steuerung von 5 Scheiben

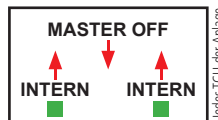

**Paarweise**  
Steuerung von 10 Scheiben mit demselben Gerät

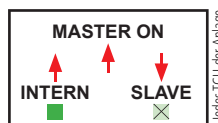

**Zentrale Steuerung**  
Steuerung aller Scheiben (gesamte Anlage) mit einem Gerät

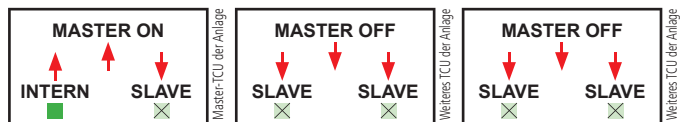

**Legende:**

↑ Schalter nach oben

↓ Schalter nach unten

■ Start-Knopf aktiv

⊗ Start-Knopf nicht aktiv